

Which Adjustable Base Remote Do I Have?

Find the remote below that looks like yours, then let us know the number listed above it.

Remotes 1–5 are current models — replacements can be purchased on tempurpedic.com. **Remotes 6–16** are prior models — contact us to check remote availability.

1  TEMPUR-Ergo® ProSmart® Base • Black remote • Reads PROSMART at bottom • 28Hz and 40Hz massage buttons	2  TEMPUR-Ergo® ProSmart® Air Base • Black remote • Reads PROSMART AIR at bottom • LEFT, SYNC, RIGHT buttons	3  TEMPUR-Ergo® Power Base • Silver remote • Reads TEMPUR ERGO at bottom • One massage button	4  TEMPUR-Ergo® Smart Base • Silver remote • Reads SMART at bottom • Three massage buttons
5  Ease® Power Base • Small black remote • Reads EASE at bottom • Round ZERO G in middle	6  Ease® 2.0 Power Base • Small black remote • Reads EASE at bottom • Same look as 5 and 7	7  Ease® 3.0 Power Base • Small black remote • Reads EASE at bottom • Same look as 5 and 6	8  TEMPUR-Ergo® Power, Smart, Extend (prior) • Black, rounded curved back • Reads TEMPUR-PEDIC at bottom • ZERO G and star buttons
9  TEMPUR® Ergo Advanced • White, green buttons • Blue ridged sides • LIFT and MASSAGE sections	10  TEMPUR-Ergo Premier™ • Silver, green buttons • Small screen at top • HEAD, LUMBAR, LEG massage	11  TEMPUR-Ergo® Grand • Dark gray, green buttons • Same layout as 10, darker • Small green screen at top	12  TEMPUR-Ergo® Plus • All white, six buttons • head and foot arrows • flat button with 1 and 2
13  TEMPUR-UP™ • Small white remote • Has a cord, plugs in • Only up, down, flat	14  TEMPUR-Ergo Raven • White and green, curved • Green CUSTOM, orange SET • Two green arrows on right	15  TEMPUR-Raven™ • All white rectangle • Eight round blue buttons • Flashlight and FLAT buttons	16  TEMPUR Ergo Series • White, blue ridged sides • Has a cord, plugs in • Blue FLAT button in middle

Still not sure which remote you have? Send us a photo and we'll identify it for you.